

CLEANING INSTRUCTIONS

In order to ensure safe light levels are maintained during operation the optical face of the luminaire should be cleaned at regular intervals. The optical covers are made from polycarbonate.


- Use lukewarm soapy water and a soft sponge or cloth to clean the optical surface. If luminaires are not accessible by hand use a long-poled car or RV washing pad.
- If using soapy water rinse using clean water.
- After final rinse dry off with a soft cloth. Polycarbonate is vulnerable to scratching.
- Do not scrub with brushes, abrasive materials or sharp instruments as these will mark the surface.
- Never use solvents, alkaline cleaners, thinners or abrasive cleaners.
- Do not steam clean or high pressure wash.
- Never use: acetone, petrol, benzene, or solvents containing Butyl Cellosolve or Isopropanol.
- Incorrect cleaning which in any way damages the unit automatically renders void all warranties.


INSTALLATION INSTRUCTIONS

Step 1

Choose luminaire position and orientation.

When choosing the location of Tunnel Ray luminaire, please ensure that sufficient clearance is allowed for the airflow through the heatsink. Avoid blocking the air vents.

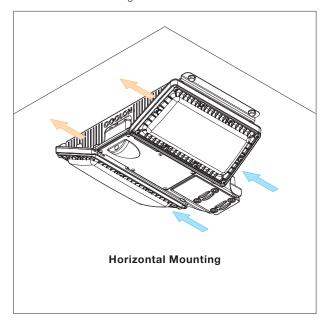

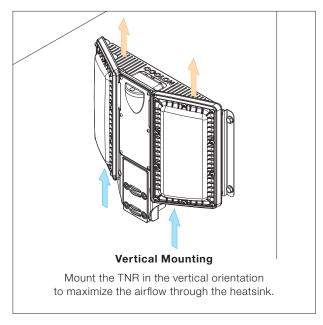




EXTERNAL EARTHING

When mounted on a non-conductive or non-earthed facilities, the body of the luminaire needs to be externally grounded.

One of the 4x M6 nutserts can be used as appropriate. It is recommended that a spring/locking washer and 4mm² cable with a suitable terminal is used (not supplied with the fitting).

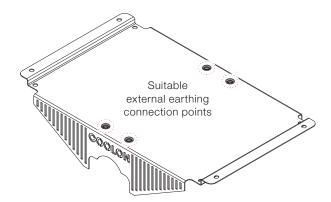

WIRING

Mains (100 - 240VAC) Version



Cable needs to be terminated in a suitable enclosure such that the outer sheath provides the sealing for the inner sheath and conductors.

This is to eliminate the possibility of any ingress due to the capillary effect created as the unit goes through the warm up and cool down cycles.

